

(Figure. 2)

For proper wire sizes and torque requirements, refer to the label on the door assembly.



INSTALLATION INSTRUCTIONS

OEM Installation Manual
 For use with WFCO ULTRA III Power Center
 Model WF-8712P and WF-8725P



Distributed in the U.S.A. and Canada by
 Arterra Distribution
 Warranty Service (877) 294-8997
 Fax (574) 294-8698

OEM Installation of the WFCO WF-8712 and WF-8725 Power Center



Select a mounting location near the shore power and battery (batteries) and cut a rough opening 1/8" wider than the box to allow the power center to slide in easily.

Select a mounting location that is appropriate to prevent excessive heat, water, moisture, dust and dirt entering the unit installed. Allow a minimum of two cubic feet of clear airspace and any additional venting as necessary to prevent the unit from overheating.

⚠ WARNING ⚠

This unit employs components that tend to produce arcs or sparks. To prevent fire or explosion, do not install in compartments containing batteries or flammable materials (LP gas).

⚠ CAUTION ⚠

To prevent fire, do not cover or obstruct ventilation openings. Do not mount in zero-clearance compartment. Overheating may result. For continued protection against risk of fire, or electric shock replace only with same type and ratings of fuse.

The fuse rating that the manufacturer suggests for the output fuses will be marked on the unit. Replace only with same type and rating.

During the manufacturing process, be sure that all converter openings are protected from debris falling into the unit. **(This is a non-warranty item.)**

NOTE: If the reverse battery protection fuses are blown during installation, be sure that the battery has been connected properly, then replace the fuses with ATC "Littelfuse®" Type 257 with the same rating as the original.

DC OUTPUT

GROUND WIRE HOLE

INSTALLATION INSTRUCTIONS

6 1/16"

2




INSTALLATION INSTRUCTIONS

2 1/8"

1 7/8"

3

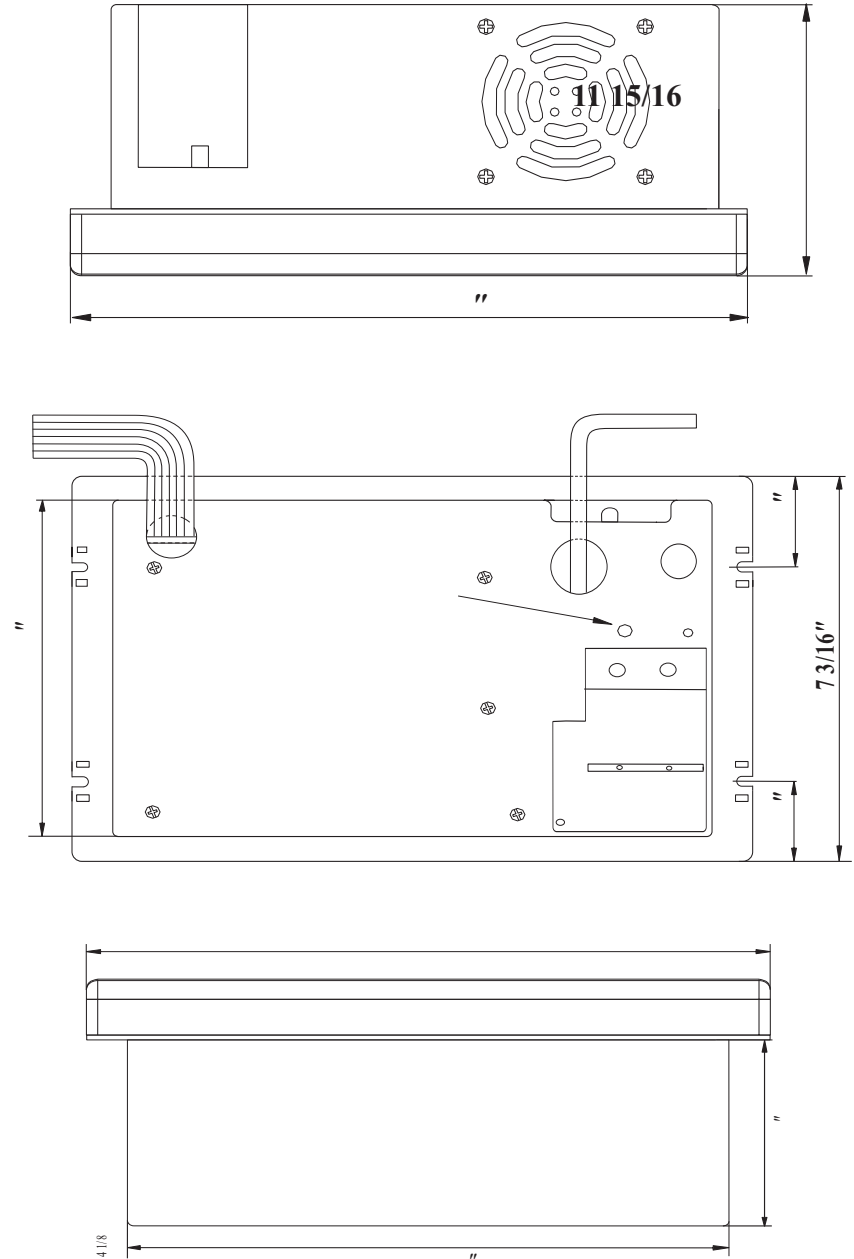

(Figure. 1)